


## Installation Note

The TouchOne uses a high quality, capacitive multi-touch screen constructed from glass, similar to most modern mobile phones. All due care should be taken when installing and removing the TouchOne from its enclosure to ensure the device is not bent to avoid damage to the glass screen.

Please take note of the instructions on the screen during installation and minimize the amount of cable that is stored behind the TouchOne screen.

## Removing the TouchOne from the Enclosure

Should you need to remove the TouchOne from its enclosure, you must release the clips on one side and the top of the device to minimise the risk of damaging the screen. Once the clips are released, the TouchOne should easily detach from its enclosure. You should not need to pull the device from the enclosure.

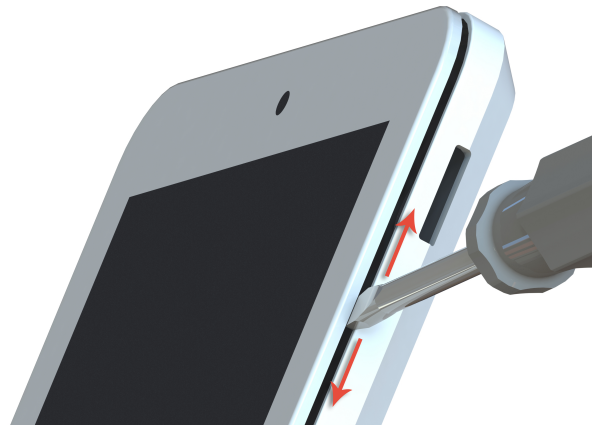

To release the clips:

1. Insert and twist a small flat-head screwdriver into one of the two small indents on the same side of the enclosure that shows the SD Card slot.
2. Run the screwdriver up the length of the device, repeating the same twisting motion until all the clips have been released.
3. Repeat step two along the top edge until the enclosure is no longer holding the device.

*Ensure at least 8 clips have been released before attempting to remove the screen. Applying too much force to the device may risk permanent damage to the screen.*