Keeping your Touchscreen software up to date

New software for your touchscreen is released regularly and can be updated automatically over wifi. To receive these updates, you need to:

- Ensure the date and time is correct
- Connect your touchscreen to wifi
- Install the update once it has download.

To obtain urgent updates, you should provide your serial number to your installer for inclusion in the early-release process.

Setting the date:

From the Settings menu, select Date and Time:


(K Settings	
	Users isarmed O D	A2
	Outputs	>
	Date and Time Arm All Areas) Setti) gs
	Touchscreen Settings	

Scroll up and down to change the date and time and then press next:



Connecting to wifi:

From the home screen, click on Settings:

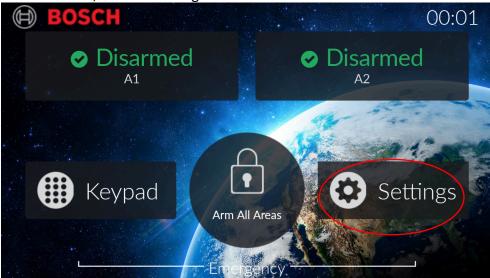

In the Settings menu, select WiFi:

<	Settings	
O Disarmo Touchscreen	Settings	
Wifi	A	$\langle \rangle$
Apps pad	Arm All Areas	Setting
Dicplay Ma	Inanor C Sounds)

Ensure WiFi is switched on:

<	Wifi			
WIFI A1				
Current Networ	k		10 A.	
eightdevelop	oment Arm All Areas	(3)	Setti) a	5
Available Netwo	rk	N.S.S.		

Select your WiFi network from the Available Network list, and then click on the password field to enter your password. Once successfully connected, your network will appear under Current Network.

Checking for updates:

Your touchscreen will automatically check for updates every 24 hours. You can also initiate an update by going selecting Settings, then About, and Check for Updates.

Installing the update:

Whenever an updated version of software is downloaded, it will not be installed without your permission. When you see the message 'New Software Update Available' please select Install.

Obtaining your serial number:

From the settings menu, select About.

	Settin	gs	
La	nguage	O Disarmed	
Ab	pout	· · · · · · · · · · · · · · · · · · ·	
Adv	vanced Settings All Are	^{as}	and a second sec

Take a note of the value in the Serial Number field and pass it along to your installer to receive early or urgent updates.

(About
	A1 A2
	Bosch TouchOne Mini TS5
	Serial Number
	100-005-284 Arm All Areas
	Interface